Redox Behavior and Activity Measurement of Individual Ceria-Zirconia Nanoparticles

Ruigang Wang^{1,2}, Peter A Crozier^{*1,2}, Renu Sharma^{1,2}, James B Adams² ¹Center for Solid State Science and ²School of Materials, Arizona State University 85281-1704 *crozier@asu.edu

Introduction

The ability of cerium oxides to reversibly form mixed +3 and +4 valence oxides $(CeO_2 \text{ and } Ce_2O_3)$ leads to excellent oxygen storage capacity (OSC). It has been reported that the addition of zirconia not only improves the life of the redox cycles but also lowers the reduction temperature [1-2]. Therefore nanoscale ceria zirconia particles have been widely used in automobile three-way catalysts to adjust the local oxygen environment in order to remove the unwanted gases from exhaust to reduce pollution. It is easily accepted that nano and bulk properties are different due to their size-dependent effects, for example, surface-tobulk ratio, the number of active sites and possible composition and structure variation at nanometer level etc. Bulk characterization such as x-ray diffraction (XRD), temperature programmed reduction (TPR) and thermal gravimetric analysis (TGA) etc. measure the average or sum the properties a large ensemble of nanoparticles. Identification of structural and chemical features of individual nanoparticles could offer substantial opportunities for manipulating nanostructured catalytic materials and understanding their properties. For this reason, we have undertaken a detailed *in situ* environmental scanning transmission electron microscopy (E-STEM) study of the dynamic nanostructural and nanochemical changes that take place in ceria zirconia nanoparticles during redox cycles. The simultaneous dynamic nanostructure and nanochemistry evolution from individual nanoparticles opens up the possibility to distinguish and optimize their redox activity.

Materials and Methods

Powder samples of ceria zirconia solid solutions were prepared by a spray freezing method. Experimental raw materials and synthesis procedures are described elsewhere [2]. A Tecnai F20 E-STEM with an environment cell was used for the *in situ* nano-characterization to monitor the changes that occurred under different reducing conditions. High resolution electron microscopy (HREM), scanning transmission electron microscopy (STEM) imaging and electron energy-loss spectroscopy (EELS) were used to follow the structural and oxidation state changes during reduction in H₂. Parallel *ex situ* reduction and *in situ* E-STEM characterization have been carried out to compare and understand redox properties. The *in situ* E-STEM characterization reported here is from the sample subject to two reduction cycles [2].

Results and Discussion

Figure 1 shows the HREM images and associated EELS (inserts) of two individual ceria zirconia nanoparticles at 586^{0} C in 1.5 torr H₂. The change in the relative height of the peaks at the beginning of Ce M₄₅ edge in the energy-loss spectrum shows that the right nanoparticle (active) has transformed from the Ce⁺⁴ to Ce⁺³ oxidation state, but the left one (unactive) has not. Figure 2(a) shows the oxidation state for same two nanoparticles as a function of temperature and Figure 2(b) shows *in situ* EELS spectra during *in situ* reduction for the active nanoparticle. EELS line scan analysis in STEM mode at 572^{0} C (not shown) revealed a 10~15% composition variation between these two nanoparticles. The chemical composition analysis of the active nanoparticle shows a lower Ce/Zr atomic ratio. This result is consistent

with *ex situ* reduction cycling characterization that the reduction fraction decreased with redox cycling as there is a significant redox activity difference between nanoparticles after the first reduction cycle. Detailed results will be presented and discussed in terms of the correlation between redox activity and nanostructure, nanochemistry of individual nanoparticles.

Significance

Correlating *in situ* atomic-scale structural and chemical changes taking place on individual nanoparticles and comparing with *ex situ* reduction characterization will give insights into the origin of the enhanced redox properties and also help identify their structural and chemical features of active ceria zirconia nanoparticles.

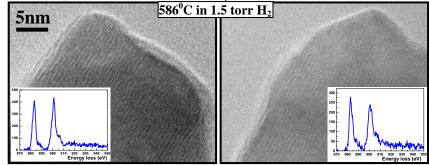


Figure 1. HREM images and associated electron energy-loss spectrum (insert) for two individual ceria zirconia nanoparticles at 586° C in 1.5 torr H₂. The *in situ* EELS (inserts) shows that the particle on the right is more strongly reduced than the particle on the left.

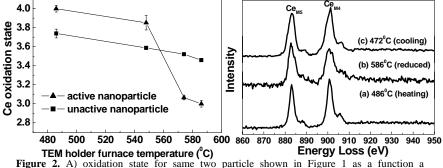


Figure 2. A) oxidation state for same two particle shown in Figure 1 as a function a temperature. B) *in situ* EELS spectra during reduction for the active nanoparticle. **References**

- 1. Fornasiero P et al, J. Catal. 164(1), 173 (1996); Yeste MP et al, Chem. Mater. 18, 2750 (2006); Montini T et al, Chem. Mater. 17, 1157 (2005)
- 2. Wang RG, Crozier PA, Sharma R, Adams JB, J. Phys. Chem. B. 110(37), 18278 (2006).
- 3. We acknowledge support from the National Science Foundation (NSF-CTS-0306688).